

CREAM BOOSTER

INSTRUCTION MANUAL

Safety Instructions:

To ensure proper operation of this appliance, please read this instruction manual carefully before using the appliance and save it for further reference.

⚠ WARNING

- Do not use this appliance under the following conditions:
 - Pregnant women
 - Children
 - Persons with implanted medical device
 - Persons with sensitive skin
 - Persons with skin conditions
 - Areas where epilation or plastic surgery was performed
 - Areas such as eyelids or throat
 - While wearing makeup
 - When the appliance is charging
- Immediately stop using the appliance and consult a specialist if you feel unwell
- Do not place the appliance in a hot or humid environment.
- Do not attempt to modify, disassemble, or repair the appliance by yourself.


Specifications:

- Name: Cream Booster
- Item NO.: AP-002
- Charging Voltage / Current: 5V --- / 500mA
- Rated Voltage / Power: 3.7V --- / 1W
- Type of Battery: Li-ion 3.7Vdc 500mAh
- Size: 160.3mm X 43mm X 40.2mm
- Material: ABS, Stainless Steel

Product Description (Picture 1):

- ① Yellow Light
- ② Massage Head
- ③ Cotton Pad Fixing Ring
- ④ Silver Touch Bar
- ⑤ Ion- Indicator
- ⑥ Ion+ Indicator
- ⑦ Light/Charging Indicator

- ⑧ Yellow Light Button
- ⑨ Ion⁻ Button
- ⑩ Ion⁺ Button
- ⑪ Charging Port
- ⑫ USB Cable

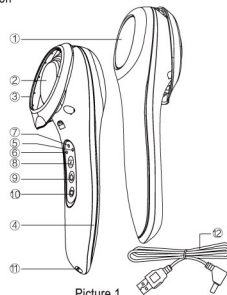

Picture 1

Operation Method:

※ Charging the appliance takes about 3 hours, and it can be used continuously for up to 2 hours.

* * Light Button

Press once: To turn on the appliance and the Yellow Light Mode, the Light Indicator ⑦ lights up red.
Press a second time: To change to Intermittent Yellow Light Mode, the Light Indicator ⑦ lights up red intermittently.
Press a third time: To turn off the appliance.

* * Ion⁻ Button

Press once: To turn on the appliance and the Negative Electrode Mode, the Ion⁻ Indicator ⑤ lights up blue.
Press a second time: To change the function to Intermittent Negative Electrode Mode, the Ion⁻ Indicator ⑤ lights up blue intermittently.
Press a third time: To turn off the appliance.

* * Ion⁺ Button

Press once: To turn on the appliance and the Positive Electrode Mode, the Ion⁺ Indicator ⑥ lights up green.
Press a second time: To change the function to Intermittent Positive Electrode Mode, the Ion⁺ Indicator ⑥ lights up green intermittently.
Press a third time: To turn off the appliance.

Positive Electrode automatically turn off after 5 minutes.
Negative Electrode automatically turn off after 5 minutes.
Yellow light automatically turn off after 10 minutes.

※ It is recommended to use the intermittent mode for people with sensitive skin or for first time users.

Using the Appliance:

Pore Cleansing

1. Before using the Positive Electrode Treatment, please unfold the Cotton Pad Fixing Ring ③ and attach the cotton pad to the Massage Head. Apply toner to the cotton pad and ensure your fingers are in contact with the Silver Touch Bar. Place the Massage Head on your face and move it gently in circular motion from the center to the sides of the face (picture 2).



Picture 2

2. After you finishing the Positive Electrode Treatment, remove the Cotton Pad from the Massage Head and rinse your face with warm water. Change the function to Negative Electrode Treatment.
3. Apply moisturizing cream to your face and ensure your fingers are in contact with the Silver Touch Bar. Place the Massage Head on your skin and move it gently in circular motion from the center to the sides of the face (picture 3).



Picture 3

4. Change the function to Yellow Light Therapy. Keep the appliance 2 to 3 cm away from your face, move the light back and forth evenly on the entire face (picture 4).



Picture 4

Note: the using time for each function mode is depend on personal necessary.

Cleansing and Maintenance:

1. Turn the appliance off before you start cleaning it. Clean the Massage Head and the appliance body after each use.
2. Do not use water, alcohol, steel wool, abrasive cleaners or corrosive liquids to clean it. Doing so may result in malfunction or discoloration of the appliance.

Trouble Shooting:

Problem	Possible Cause	Solution
The appliance does not work	The battery is running low	Charge the appliance
	The battery is out of power	
If the appliance has any other problem than the ones mentioned above, please contact your local retailer.		