

Uniden

AR 1301 Alarm Clock Radio



INSTRUCTION MANUAL

Thank you for buying **UNIDEN's** product. Read this manual carefully to get the best performance from this unit.



WARNING : TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 
 
CAUTION : THE CLOCK RADIO MUST NOT BE USED IN ANY ENVIRONMENT WHERE IT MAY BE SUBJECT TO THE DRIPPING OR SPLASHING OR WATER OR OTHER LIQUIDS.

DO NOT CONNECT THE ANTENNA WIRE ON THE BACK OF THIS SET TO ANY OUTDOOR ANTENNA

IMPORTANT

- Do not block any ventilation openings, Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the clock radio.
- Unplug this clock radio during lightning storms or when unused for long periods of time.
- This clock radio shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the clock radio (e.g. liquid filled objects, lighted candles).
- Dispose used battery according to local recycling regulation.


LOCATION OF CONTROL

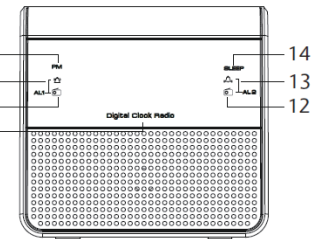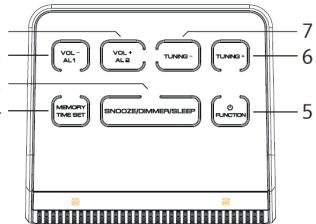

- VOLUME + / AL2
- VOLUME - / AL1
- SNOOZE / DIMMER / SLEEP
- MEMORY / TIME SET
- ⏻ / FUNCTION
- TUNING+
- TUNING -
- PM INDICATOR
- ALARM 1
- AL1 INDICATOR
- DIGITAL DISPLAY
- AL2 INDICATOR
- ALARM 2
- SLEEP INDICATOR
- USB FOR CHARGING THE PHONE OR OTHER DEVICE
- DC INPUT
- FM ANTENNA WIRE

CONNECT POWER CAUTION

 - Risk of product damage! Ensure that the power voltage corresponds to the voltage printed on the back or underside of the clock radio.
- Risk of electric shock! When you unplug the AC adaptor, always pull the plug from the socket. Never pull the cord.

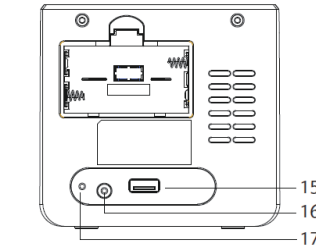

BOTTOM OF SET

Battery compartment for 1.5 volt (2X AA/ LR6/ UM-3) battery 2pcs. (not included) for temporary time storage.

SET TIME

- Press and hold **TIME SET** for two seconds;
- Press **HOUR** or **MINUTE** to select 12/24 hours and then press **TIME SET** again to confirm setting..
- Press on "**TIME SET**" : hours is blinking
- Press "**TUNNING -**" and "**TUNNING +**" to change hours down or up
- Press "**TIME SET**": minutes is blinking
- Press "**TUNNING -**" and "**TUNNING +**" to change minutes down or up
- Press "**TIME SET**" to validate

LISTEN TO FM RADIO

For better reception, fully extend and adjust the position of the FM antenna wire.

- Press **⏻ / FUNCTION** to turn on FM radio.
[FM frequency] is displayed .
- Press **TUNING - / +** for two seconds.

The FM Tuner tunes to a station with strong reception automatically. Press **TUNING - / +** repeatedly to tune to a radio station.

STORE FM RADIO STATIONS

You can store up to 20 FM radio stations in preset channel automatically or manually.

AUTO SCAN FM RADIO STATION

PRESS "SNOOZE/DIMMER / SLEEP" for 2 Seconds.
The channels will auto save at the preset stations.

STORE FM RADIO STATIONS MANUALLY.

- Tune to a **FM** radio station.
- Press **MEMORY** and hold for 2 seconds to activate the storage mode.
- Press **TUNING - / +** to select the preset number.
[P 01 ~ P 20] is preset station numbers.

Press **MEMORY** button again to confirm the station number.
If this position is occupied, the previous stored frequency will be displayed ;
To remove a pre-stored FM radio station, store another station in its place.

LISTEN TO A PRESET FM RADIO STATION

Press **MEMORY** to select a preset number.

Note

The digital display returns to clock display if no buttons is pressed for 5 seconds

SET ALARM TIMER

Make sure that you have set the clock correctly.

You can set two separate alarm timers. For the alarm sound, you can select the FM radio or the buzzer.

- Press and hold AL1/AL2 for two seconds.
[0:00] Hour digit is blink
- Press "**TUNNING -**" and "**TUNNING +**" to change hours down or up
- Press "**AL1/AL2**": minutes is blinking
- Press "**TUNNING -**" and "**TUNNING +**" to change minutes down or up
- Press "**AL1/AL2**" , "**FM**" digit is blink
- Press "**TUNNING -**" and "**TUNNING +**" to select the FM radio or the, buzzer. "**FM**" means buzzer, "**FM**" means FM radio.
- Press "AL1/AL2" then we can set the alarm volume.

- Press "**TUNNING -**" and "**TUNNING +**" to change alarm volume down or up. It can be from **0.05** to **0.75**

- Press "**AL1/AL2**" to confirm the **ALARM TIMER**

SNOOZE ALARM

When alarm sounds, press **SNOOZE** to activate the snooze time 9 minutes.

- The **AL1 / AL2** indicator keeps blinking.

SET SLEEP TIMER

This clock radio can switch to standby mode (radio off) automatically after a preset period.

- Press **⏻ / FUNCTION** to radio mode.
- Press **SNOOZE/DIMMER/SLEEP** multi-function button repeatedly to select the sleep timer period (in minutes).
Sleep indicator is light up.

To deactivate the sleep timer, press **SNOOZE/DIMMER/SLEEP** multi-function button repeatedly until back to timer off mode.

ADJUST VOLUME

While listening, press **VOLUME +** or **VOLUME -** to adjust volume.

ADJUST DISPLAY BRIGHTNESS

During standby mode, press and hold DIMMER for 2 seconds repeatedly to select high or low brightness levels.

USB Charging

Use the USB charging port to charge your smart phone or to power USB powered devices such as a USB type lamp or fan.

To Connect your cell phone for charging :

Use a USB cable (not included) to connect your cell phone to the USB

connector or the unit. Your cell phone should start charging.

Remarks :

Charging function may not be supported for all phones or electronic devices

BATTERY BACK-UP

(For Temporary Time Storage Only)

Install (2X AA/ LR6/ UM-3) battery (not included) according to polarity shown inside the battery compartment. In the event of a power interruption, your set will not work normally from the mains supply but there is now the advantage that your clock will continue to work. The clock display will not light up, as the clock time will be held in the memory. This also enables you to move the set from place to place without re-setting the clock every time.

SPECIFICATION

Adaptor model No	: KC12W03-050100YG
Power Source	: 100-240V~50/60Hz
Tuner Range	: FM 87.5-108.0MHz
Power Consumption	: ≤1W
USB Charging power	: DC 5V 1A (standby mode)

Product information is subject to change without prior notice.

