

MODEL:AS7201
OWNER'S MANUAL



PLEASE READ BEFORE USE

1 Getting Started

Welcome

Thank you for purchasing a Uniden phone.


NOTE : Illustrations in this manual are used for explanation purposes.
Some illustrations in this manual may differ from the actual unit .

Features Review

- 10 one-touch memories
- Ringer selectable (High / Low / Off)
- Redial
- Tone Dialing
- Flash selectable (100 / 300 / 600 / 1000ms)
- Mute
- Pause
- Hold

Accessories (included)

- 1.Base
- 2.Handset
- 3.Line Cord
- 4.Coil Cord
- 5.User Manual

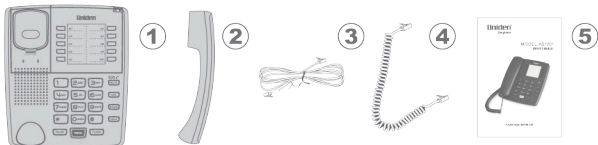

2 Setting

Ringer Volume Level

You may select ringer level large “🔔” small “🔔” , or off “🔕” .

Flash Time Setting

Flash time100ms / 300ms / 600ms / 1000ms, default setting 600ms.
If change to other time

In off-hook mode:

- 1.Press * # * +Flash Time(100 / 300 / 600 / 1000ms) and then press [Flash] button.

e.g: To set 100ms, press * # * +100+[FLASH]

3 Memory

Memory Store

You can store a number up to 32 digits in 10 one-touch memories [M1].....[M10] .

One-touch Memory Store

In Off-hook mode:

- 1.Press [STORE] button and then use the number keypad to enter the telephone number you want to store(up to 32 digit)
- 2.Press [STORE] button and [M1].....[M10] of desired memory location.

Memory Delete

In Off-hook mode:

- 1.Press [M1]....[M10] button 3 seconds and then press **+ [M1]....[M10] button.

Memory Dialing

One-touch DIAL:

In Off-hook mode:

1. Press [M1]....[M10] button, the phone number stored in the location can be dialed out directly.

4 Phone Basics

Redial

If you get a busy tone when dialing, pressing the [REDIAL] button will automatically redial the last number you dialed.

Flash

During conversation, pressing [Flash] button will momentarily interrupt the telephone conversation to access telephone company services.

Voice Message

In Off-hook mode:

- 1.Press [MSG] button 3 seconds and then enter voice message service number.
- 2.Press [MSG] button to save the number.

Listen the Message

In Off-hook mode:

- 1.Press [MSG] button to listen the message.

4 Phone Basics

Mute Function

While off-hook, pressing the [MUTE] button will prevent from the other party hearing you. Pressing it again will resume normal conversation.

Pause

Press [PAUSE] button to insert a delay of 2 seconds.

Music on Hold

At Off-hook status:

- 1.Press [HOLD] button, Hold music will play, then put down the handset.
- 2.Picking up the handset again, the Hold music will stop, enter conversation state by handset automatically.
- 3.Or, pressing [HOLD] button again, the Hold ring will stop, enter conversation state by Hand-free automatically.

5 Troubleshooting

No dial tone

- Check all cabling to make sure that all connections are secure and not damaged .
- Ensure the telephone line cord is securely connected to the modular jack .
- Connect another phone to the same modular jack .If it does not work , the problem might be your wiring or local service .
- Use another telephone line .