

MODEL:AS7301 OWNER'S MANUAL



PLEASE READ BEFORE USE

Phone Basics

Speakerphone Operation

Pressing Speakerphone button will activate speaker operation. During Speakerphone conversation, picking up handset will automatically switch the conversation to the handset.

Speakerphone Volume Adjustment

In the speakerphone, press the [VOL] button, you can adjust the size of two tranches cycle handsfree volume.

The default speakerphone volume is large file

Troubleshooting

No Dial Tone

- Check all cabling to make sure that all connections are secure and not damaged
- Ensure the telephone line cord is securely connected to the modular jack
- Connect another phone to the same modular jack . If it does not work, the problem might be your wiring or local service
- Use another telephone line

Safety Instructions

Take special care to follow the safety suggestions listed below Please do not use telephone during thunderstorm.

Installations Environment

- 1. Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescentlamps).
- 2. Do NOT expose to direct sunlight or moisture.
- 3. Do not install the telephone during thunderstorm
- 4. Clean the phone with a soft cloth.
- 5. Never use a strong cleaning agent or abrasive powder because this will damage this unit.
- 6. Avoid dropping the handset, as well as other rough treatment to the phone.

Placement

- 1. Do not place heavy objects on top of this unit
- 2. Care should be taken so that objects do not fall onto, and liquid into the unit .Do not subject this unit to excessive smoke ,dust, mechanical vibration or shock

WARNING: To prevent fire or shock hazard, do not expose this product to rain or any type of moisture.

Getting Started

Welcome

Thank you for purchasing a Uniden phone.

NOTE: Illustrations in this manual are used for explanation purposes. Some illustrations in this manual may differ from the actual unit

Redial/Paus

Features Review

- Mute
- Pause
- Redial
- Tone Dialing
- Speakerphone
- MSG (Message)
- 10 one-touch memories
- Ringer selectable (High / Low / Off)

• Flash selectable (100 / 300 / 600 / 1000ms) Accessories (included)

 
- 1. Base unit 4. Handset cord
- 2. Handset
- 5. User manual
- 3. Telephone line cord

Message Waiting Lamp









Setting

Ringer Volume Level

You may select ringer level large "\Omega" small "\Omega", or off "\Omega"

Flash Time Setting

Flash time100ms / 300ms / 600ms / 1000ms, default setting 600ms. If change to other time

In off-hook mode

1. Press * # * +Flash Time(100 / 300 / 600 / 1000ms) and then press [Flash] button.

e.g: To set 100ms, press * # * +100+[FLASH]

Memory

Memory Store

You can store a number uo to 32 digits in 10 one-touch menories [M1]...[M10]. One-touch Memory Store

In Off-hook mode:

- 1. Press [STORE] button and then use the number keypad to enter the telephone number you want to store(up to 32 digit)
- 2. Press [STORE] button and [M1].....[M10] of desired memory location. Memory Delete

In Off-hook mode:

1. Press [M1]...[M10] button 3 seconds and then press **+ [M1]...[M10] button.

Memory Dialing

One-touch DIAL:

In Off-hook mode:

1. Press [M1]....[M10] button, the phone number stored in the location can be dialed out directly.

Phone Basics

Redial

If you get a busy tone when dialing, pressing the [RD/P] button will auto matically redial the last number you dialed.

During conversation, pressing [Flash] button will momentarily interrupt the telephone conversation to access telephone company services.

Voice Message

In Off-hook mode:

- 1.Press [MSG] button 3 seconds and then enter voice message service number.
- 2.Press [MSG] button to save the number.

Listen the Message

In Off-hook mode:

1. Press [MSG] button to listen the message.

Mute Function

White off-hook, pressing the [MUTE] button will prevent from he other party hearing you. Pressing it again will resume normal conversation.

Press [RD/P] button to insert a delay of 2 seconds.