



PLEASE READ BEFORE USE

1 Getting Started

Welcome

Thank you for purchasing a Uniden phone.

NOTE : Illustrations in this manual are used for explanation purposes.
Some illustrations in this manual may differ from the actual unit .


Features Review

- DTMF/FSK Caller ID
- Incoming CID-50 (8 Digits) or 32 (16 Digits)
- Outgoing CID-14 (8 Digits) or 8 (16 Digits)
- LCD Contrast Selectable
- Do Not Disturb (DND)
- 3 One Touch Memories
- Ringer Selection
- Ring Volume Selection And Speaker Volume Selection
- Tone/Pulse Dial Mode
- Flash Time (90/95/100/120/180/300/600/1000ms)
- Alarm
- Music On Hold
- Auto Switch Back To On-Hook
- 8 Digits Outside Line Code Setting
- 8 Digits Local Area Code Setting


*Caller ID requires subscription to your local telephone company.

Accessories (included)

- 1.Base
- 2.Handset
- 3.Line Cord
- 4.Coil Cord
- 5.User Manual

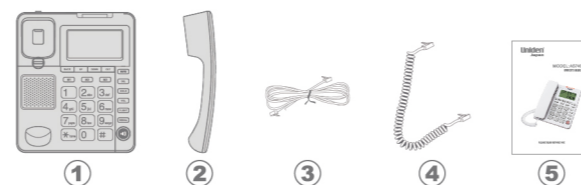

Location of controls

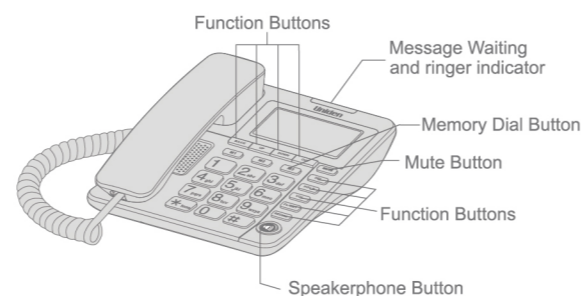

LCD display layout



- | | | |
|---|-----------------------------|---------------------------|
| 1 | 18.28.88:88 | Date,time |
| 2 | IN | Incoming call |
| 3 | OUT | Outgoing call |
| 4 | NEW REP MAIL | Lock,new call,repeat,mail |
| 5 | 0000000000000000 | Phone number display |
| 6 | SUN MON TUE WED THU FRI SAT | Week display |

2 Settings

In on-hook state,press FL/SET button to go to main menu,the display shows [SET 12345678] on the screen.

Date/Time Setting

On the main menu,enter 1 and [1:DATE 2-] will appear on the screen.
Press 1 to go to Date/Press 2 to go to Time setting and set the item flashing.
Press the FL/SET button to confirm and then press the **[M]** to exit.

2 Settings

Ringing Selection

On the main menu,enter 2 and [r r 2U IP 3Uol] will appear on the screen.
Enter 1 and [r r 9 r 9PE 01] will appear on the screen.
Press Up and Down button to choose the ringing you want.
Press FL/SET button to confirm
Press DEL to continue with other settings.
Enter 2 and [r r 9 U IP 01] will appear on the screen.
Press Up and Down button to choose the VIP ringing you want.
Press FL/SET button to confirm
Press DEL to continue with other settings.
Enter 3 and [r r 9 UOL 3] will appear on the screen.
Press Up and Down button to choose the ringing volume you want.
Press the **[M]** to exit.

Alarm Setting

On the main menu,enter 3 and [AL 1-2-] will appear on the screen.
Enter 1 and [ALAr OFF] will appear on the screen indicating this function is off.
Enter the timing for alarm and press the FL/SET button to confirm.
Press DEL to continue with other settings.
Enter 2 for the second Alarm setting on the day, [dArAl 1 OFF] will appear on the screen.Enter the timing and press the FL/SET button to confirm.
Press DEL to continue with other settings.
Enter 3 for the third Alarm setting on the day, [dArAl 2 OFF] will appear on the screen.
Enter the timing and press the FL/SET button to cofirm.
Press the **[M]** to exit.
Note: To Cancel the Alarm settings,press Up to Down button until you find [ALAr OFF] on the screen and press the FL/SET button to confirm.

Do Not Disturb (DND)

On the main menu,enter 4 and [OFF, r 00-00] will appear on the screen.
Enter the timing on the digits flashing,the first two digits are hours and the latter two are minutes.
Press the FL/SET button to confirm.Once this setting is done,you can receive incoming call without ringing until the timing you have set has elapsed.
Press the **[M]** to exit.
To cancel this setting,press the **[M]** button.

Flash Time/Pulse & Tone/Privacy Setting

On the main menu,enter 5 and [1-f 2-Pf 3-d] will appear on the screen.
Press 1 to go to Flash time setting and press the Up and Down button to select Flash time (90/95/100/120/180/300/600/1000ms).
Press FL/SET button to confirm.The default is 600ms.
Press DEL to continue with other settings.
Press 2 to go to Pulse/Tone selection and press the Up and Down button to select (Pulse/Tone).
Press FL/SET button to confirm.
Press DEL to continue with other settings.
Press 3 to go to Privacy protection and press the Up and Down button to select (On/ Off). Press FL/SET button to confirm.
Press the **[M]** to exit.
Select Off if this unit is connected with an internal line.

Local Area Code/Outside Line Code Setting

On the main menu,enter 6 and [1-La[2-ul] will appear on the screen.
Press 1 to go to local area code setting and enter a local area code up to 8 digits.
Press FL/SET button to confirm.
Press DEL to continue with other settings.
Press 2 to go to outside line code setting and enter a code up to 8 digits.
Press FL/SET button to confirm.
Press the **[M]** to exit.
The default is Off mode.

2 Settings

LCD Contrast Adjustable

On the main menu,enter 7 and [Lcd con 4] will apper on the screen.
Press Up and Down button to adjust contrast.
Press the FL/SET button to confirm.
Press the **[M]** to exit.

3 Setup - On Hook Mode Operation

Back Function

In the pre-dial or during checking Incoming (Outgoing) calls, press the [BACK] button will call back the number; if you want to add " 0 " before the number, you need to press the [BACK] button for 3 seconds.

Incoming Caller ID List

At on-hook or off-hook state ,press [UP] or [DOWN] button to search ;
On-hook (standby) mode , long press [#] button for 3 seconds will quick access to incoming inquiry status.

Outgoing Scroll CID List

At on-hook or off-hook state ,press [OUT] button to search ,then press [UP] or [DOWN] button to checking the outgoing call record ;
On-hook (standby) mode , long press [*] button for 3 seconds will quick access to outgoing inquiry status.

Pre-Dial

On-hook state , enter a telephone number , if case of wrong digit entered during the process , press [DEL] button to change , after the number input is complete , Pick up the handset or press [BACK] key will dial out the number (hands-free dialing busy will automatically dial up).

3 Setup - On Hook Mode Operation

Delete Function

In pre-dialing state, press [DEL] button to delete the wrong call number.
While reviewing incoming and outgoing call numbers ,press [DEL] button to delete the selected call number .If press [DEL] button for 3 seconds , all incoming or outgoing calls will be deleted.

VIP

While reviewing the incoming calls , press [VOL] button to mark or remove the incoming call as VIP.

Memory (M1-M3)

Pre-dial enter a telephone number or review the incoming (outgoing) calls , hold the M1-M3 button to save the number. On-hook status, press the M1-M3 button will be to dial the calls.

Note: delete memory number: in the pre-dial state, press a number, and then delete the number show "-", and then long press M1-M3 to screen display [save] .

Ringer Volume Selection

On hook state, press [VOL] button to select volume levels.(4 levels)

4 Setup - Off Hook Mode Operation

Music On Hold

At off-hook status, press [HOLD] key hold music will play, then put down the handset ,—picking up the handset again, the hold music will stop, enter conversation state; →Press [**[M]**] key to hold the music off and enter the speakerphone state.

Hands-free volume adjustment

[VOL] key:Under the hands-free state, press this key to enter hands-free volume cycle menu, default third; handset state, press this key to enter handset volume cycle menu, default first.

Redial/Pause

At off-hook state, before you dial the number, press [REDIAL] button to dial the last dialed call number.

In the pre-dial or the number is dial out, press [REDIAL] button pause for 4 seconds.

Mute Function

While off-hook, press [MUTE] button will prevent the other party from hearing you speak ,at the same time mute lights light up; pressing it again will resume normal conversation ,mute lights off.

Flash Function

On-hook status press the [FL/SET] button for the function settings button;
During conversation, pressing [FL/SET] button will momentarily interrupt the telephone conversation to access telephone company services, default 600ms.

5 Safety Instructions

Take special care to follow the safety suggestions listed below.
Please do not use telephone during thunderstorm.

Installations Environment

1. Avoid putting the phone near heating appliances and devices that generate electrical noise (for example,motors or fluorescent lamps).
2. Do not expose to direct sunlight or moisture.
3. Do not install the telephone during thunderstorm.
4. Clean the phone with a soft cloth.
5. Never use a strong cleaning agent or abrasive powder because this will damage this unit.

WARNING : Toprevent fire or shock hazard,do not expose this product to rain or any type of moisture.

For sales and service in Asia
Contact : info@ustel.com.hk

6 WARRANTY CARD

18.COM Electronics Pte Ltd. WARRANTY CARD

Name : _____

Contact No.Tel: _____

Model: _____

Date Of Purchase: _____

Serial No: _____

Dealer's Stamp: _____

Service Centre:
Monday- Friday Opening Hours
9:30am - 12:30pm, 2:00pm - 5:00pm
Tel: 6278 8274

CUSTOMER'S COPY : DO NOT MAIL THIS

1. This warranty starts on the date of purchase and expires in 1 year. Customer must bring along this warranty card and original invoice or receipt together with the complete product for any repair services.
2. Any warranty application with no invoice and/or warranty card are regarded as invalid warranty. Customer must pay for repair charges.
3. This Warranty is invalid if the product has been modified,altered and /or repaired by persons other than technician of our company or mishandled by customer.
4. This warranty is applicable to Singapore only.
5. This warranty does not cover damages caused by natural disasters such as flooding and lightning etc.
6. Customers are requested to collect repaired unit within two months from date of submission.Units not collected after 6 months will be disposed off by the company.

18.COM Electronics Pte Ltd, 159 Sin Ming Road,Amtech Building,
#04-01,Singapore 575625