



# Uniden

## AT3100 User's Guide

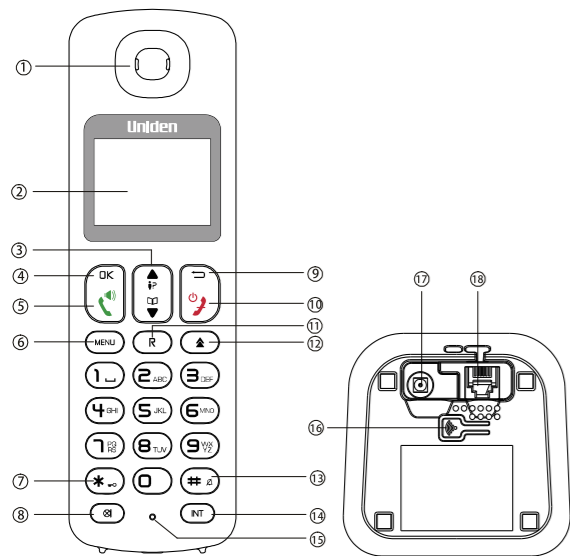

### PARTS CHECKLIST

Make sure your package includes the items show here.

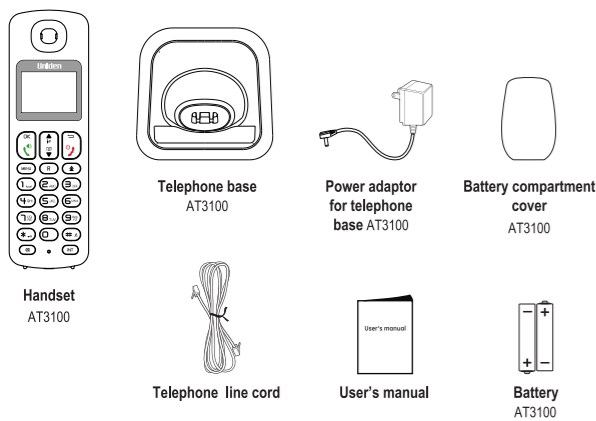

### WARNING!

#### Safety information

- Risk of explosion!
- ➔ Only use the power adapter plugs supplied!
- ➔ Only use batteries supplied or ones of the same type!
- ➔ Always treat batteries with due care and attention and only use batteries as described.
- ➔ Never use standard and rechargeable batteries together. Never use rechargeable batteries or standard batteries with different capacities or charge statuses together. Never use standard or rechargeable batteries which are damaged.
- Risk of suffocation through small objects, packaging and protective foil!
- ➔ Keep children away from the product and its packaging!
- Risks to health and the environment from batteries!
- ➔ Never open, damage or swallow batteries or allow them to pollute the environment. They could contain toxic and ecologically harmful heavy metals.
- The telephone cannot be used to make calls in the event of a power failure. Always keep a cord connected telephone which operates without an external power supply available in case of emergency situations.
- Never use the telephone in the vicinity of medical equipment. Effects on such equipment cannot be fully ruled out.

### CAUTION!

- Risk of hearing damage!
- ➔ Avoid listening at full receiver volume.

### ATTENTION!

- Risk of property damage.
- ➔ Prevent exposure to environmental influences, e.g. smoke, dust, vibration, chemicals, moisture, heat and direct sunlight.
- ➔ Only allow repairs to be completed by qualified personnel.

- Contact your telephone network provider with regard to enabling supplementary services.

### INTENDED USE

The telephone is suitable for telephoning within a public telephone network system. Any other use is considered unintended use. Observe all local directives and regulations. Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

### PACKAGE CONTENTS

AT3100: 1 Base station, 1 power adapter plug, 1 Handset, 1 Telephone connection cable, 2 Rechargeable batteries, 1 Operating instruction, 1 Battery compartment cover

### OPERATING ELEMENTS

- 1 Earpiece
- 2 Display
- 3 Up: View Calls (CID), Increase volume (+)  
Down: Phonebook, Decrease volume (-)  
Navigating in the Menu (up / down)
- 4 OK, Press to confirm the operation
- 5 Stand-by mode: Pick up the handset / make call
- 6 Open menu
- 7 Keylock (hold 2 sec.)
- 8 Microphone on / off
- 9 Back, Press to cancel a menu entry.  
Press to backspace the digit(s) or character(s). Press and hold to toggle between handset name and date/time in idle mode
- 10 Hang Up button, switch handset on / off (hold 2 sec.)  
Press to exit the menu operation
- 11 R-key (Flash)
- 12 Redial Button, Press to enter redial list and dial the recent number
- 13 Insert dialling pause, Turn ringer on / off (hold 2 sec.)
- 14 INT, Press to make a intercom call or conference call
- 15 Microphone
- 16 Search handset (paging)
- 17 Socket power supply
- 18 Telephone jack

### STARTING UP

#### Connecting the telephone line

- ➔ Connect the telephone cable to the telephone line socket.
- ➔ Connect the telephone cable to the telephone line wall socket.

#### Connecting the power adapter plug

- ➔ Connect the cable of the power adapter plug to the base station.
- ➔ Connect the power adapter plug in a properly installed mains power outlet

#### Insert the batteries according to the diagram.

#### ⚠ ATTENTION!

- The batteries or telephone could be damaged. Pay attention that the batteries are inserted correctly.  
Switch the telephone off before removing the battery compartment cover. Only switch it on again when the battery compartment cover has been replaced.

#### Charging the batteries

- Charge the batteries for at least 12 hours when charging for the first time and ensure they are subsequently discharged and charged fully. This aids a long service life of the batteries.
- ➔ Place the handset in the base station.

### ICONS IN THE HANDSET DISPLAY

	On: The connection to the base station is good. Flashing: The connection to the base station is lost.
	On: Indicates the battery charge status full. Flashing: Batteries are being charged.
	On: A call is currently being made. Flashing: A call has been received.
	On: Calls in the caller list Flashing: New calls in the caller list
	The ringing tone has been switched off.
	The alarm function is activated.
	Phonebook is activated
	On: There are more menu options or informations
	New VMWI or new SMS
	New VMWI in call log
	On: handset in linked with base Flashing: handset is out of range or not subscribed

### DISPLAY AND NOTATION OF OPERATING SEQUENCES

- Press the button depicted
- 2 sec. Press and hold down the button depicted for 2 seconds
- Mark next menu point with ▲ ▼ button
- Enter digits or letters
- [Example] Texts in square brackets give instructions to select an option or make an entry
- Display of an icon (example)
- Settings** Display of text (example)

### MENU STRUCTURE AND FUNCTIONS

#### MUTE/UNMUTE MICROPHONE

1. During a call, press button to turn on/off the microphone.
2. When the microphone is muted, the headset displays MUTE ON, and your caller cannot hear you.

#### HANDSET VOLUME SELECTABLE

During a call press or buttons to select handset volume (from volume 1 to 5).

#### PHONEBOOK

- ▶ NEW ENTRY ▶ LIST ▶ EDIT ENTRY ▶ DELETE ▶ DELETE ALL ▶ DIRECT MEM.

Example: Save **Direct Access Memory**:

(There are 2 direct access memories (Key 1 & 2) in the phonebook. A long press on the keys in idle mode will automatically dial the stored phone number.)

- ➔ **MENU** **PHONEBOOK** OK **DIRECT MEM** OK [Select Key 1 or Key 2] OK [No number] **MENU**

- Edit Entry** OK [Enter name] OK [Enter number] OK

Further processing in the **Phonebook** menu analogous example above.

#### PERSONAL SET

- ▶ HANDSET NAME ▶ HANDSET TONE ▶ LANGUAGE ▶ AUTO HANG-UP

Example: **Auto Hang Up**

(This function enables you to end a call automatically by simply placing the handset on the base unit. By default, the Auto Hang up feature is ON.)

- ➔ **MENU** **PERSONAL SET** OK **AUTO HANG UP** OK [Select on / off] OK

Further processing in the **Personal Set** menu analogous example above.

#### CLOCK & ALARM

- ▶ DATE / TIME ▶ SET FORMAT ▶ ALARM ▶ ALARM TONE

Example: Set **Date / Time**

- ➔ **MENU** **CLOCK & ALARM** OK **DATE / TIME** OK [Enter date] OK [Enter time] OK

Further processing in the **Clock&Alarm** menu analogous example above.

#### ADVANCED SET

- ▶ CHANGE PIN ▶ REGISTRATION ▶ UNREGISTER ▶ RESET ▶ AUTO PREFIX ▶ RECALL TIME ▶ DIAL MODE ▶ FIRST RING

Example: **Change Pin**

- ➔ **MENU** **ADVANCED SET** OK **CHANGE PIN** OK [Enter PIN 0000] OK [Enter new PIN] OK

Example: **Reset**

- ➔ **MENU** **ADVANCED SET** OK **RESET** OK [Confirm] OK **(All your personal settings, call log and redial list entries will be deleted)**

Example: **Registration**

(Up to 4 handsets can be registered to one base unit.)

- ➔ Press and hold **PAGING** button (16) for 5 sec. then press

- ➔ **MENU** **ADVANCED SET** OK **REGISTRATION** OK [Enter PIN 0000] OK

Example: **Brokering / Transfer / Conference**

(Only possible with two or more registered handsets)

During an internal connection you have the following options:

- ➔ Press [The internal call will be ended and you can speak to the external caller.]
- ➔ Press **INT** [The internal call is put on hold and you can speak to the external caller. Press **INT** to toggle between intern and extern]
- ➔ Press **INT** 2 sec. [The 3-party conference is established]

- ➔ Press [While connected to the internal subscriber - the external call will be transferred to the other handset.]

Further processing in the **Advanced Set** menu analogous example above.

### Technical data (All rights reserved)

Feature	Value
DE 103x Operating range: outdoor 300 m, indoor 50 m	
W x H x D	48 x 158 x 30 mm
Weight (Handset)	105 g (incl. battery)
Talking time	7 h
Standby	100 h
Charge time	15 h
Battery	2 x 300mAh NiMH 1.2V
Temperature range	-20 °C to 60 °C

#### Power adaptor plug

Using the energy-efficient power adaptor model for base unit S003GV0600050 or S003GB0600050 (input AC 100-240V ~50-60Hz, output DC 6V/500mA) or S003GV0600015 (input AC 100-240V ~50-60Hz, output DC 6V/1500mA) for charge cradle.

### Uniden AT3100 中文說明書

#### 設定手機屏幕語言

1. 按 **MENU** 鍵
2. 按 或 鍵選擇"PERSONAL SET ", 按 **OK** 鍵
3. 按 或 鍵選擇"LANGUAGE ", 按 **OK** 鍵
4. 按 或 鍵選擇所需語言, 按 **OK** 鍵

#### 手機名稱

1. 按 **MENU** 鍵
2. 按 或 鍵選擇"PERSONAL SET ", 按 **OK** 鍵
3. 按 或 鍵選擇"HANDSET NAME ", 按 **OK** 鍵
4. 輸入名字後, 按 **OK** 鍵

#### 自動掛斷通話功能

此功能方便直接在手機座放下手機後 · 立即掛斷通話

1. 按 **MENU** 鍵
2. 按 或 鍵選擇"PERSONAL SET ", 按 **OK** 鍵
3. 按 或 鍵選擇"AUTO HANG-UP ", 按 **OK** 鍵
4. 按 或 鍵選擇開 / 關 (ON / OFF), 按 **OK** 鍵

#### 手機鈴聲音量

手機內設有 5 種鈴聲音量及無聲可供選擇 (OFF = 無聲 1 = 最低 5 = 最高 預設值為 3)

1. 按 **MENU** 鍵
2. 按 或 鍵選擇"PERSONAL SET ", 按 **OK** 鍵
3. 按 或 鍵選擇"HANDSET TONE ", 按 **OK** 鍵
4. 按 或 鍵選擇"RINGER VOLUME ", 按 **OK** 鍵
5. 按 或 鍵選擇所需音量, 按 **OK** 鍵

#### 手機鈴聲

手機內設有 10 種來電鈴聲可供選擇

1. 按 **MENU** 鍵
2. 按 或 鍵選擇"PERSONAL SET ", 按 **OK** 鍵
3. 按 或 鍵選擇"HANDSET TONE ", 按 **OK** 鍵
4. 按 或 鍵選擇"RING TONES ", 按 **OK** 鍵
5. 按 或 鍵選擇所需鈴聲, 按 **OK** 鍵

#### 按鍵提示音

1. 按 **MENU** 鍵
2. 按 或 鍵選擇"PERSONAL SET ", 按 **OK** 鍵
3. 按 或 鍵選擇"HANDSET TONE ", 按 **OK** 鍵
4. 按 或 鍵選擇"KEY BEEP ", 按 **OK** 鍵
5. 按 或 鍵選擇提示音開 / 關 (ON / OFF), 按 **OK** 鍵

#### 時鐘及鬧鐘設定

##### 時間顯示格式

時間可設定為 12 小時制或 24 小時制顯示 (預設值為 24 小時制)

1. 按 **MENU** 鍵
2. 按 或 鍵選擇" CLOCK & ALARM ", 按 **OK** 鍵
3. 按 或 鍵選擇" SET FORMAT ", 按 **OK** 鍵
4. 按 或 鍵選擇" TIME FORMAT ", 按 **OK** 鍵
5. 按 或 鍵選擇時間顯示格式, 按 **OK** 鍵

##### 日期顯示格式

日期可設定為 DD/MM (日期/月份) 或 MM/DD (月份/日期)顯示

1. 按 **MENU** 鍵
2. 按 或 鍵選擇" CLOCK & ALARM ", 按 **OK** 鍵
3. 按 或 鍵選擇" SET FORMAT ", 按 **OK** 鍵
4. 按 或 鍵選擇" DATE FORMAT ", 按 **OK** 鍵
5. 按 或 鍵選擇時間顯示格式, 按 **OK** 鍵

#### 時間及日期

- 按 **MENU** 鍵
- 按 **▲** 或 **▼** 鍵選擇" CLOCK & ALARM "，按 **OK** 鍵
- 按 **▲** 或 **▼** 鍵選擇" DATE/TIME "，按 **OK** 鍵
- 輸入日期，如 2014 年 1 月 25 日，請按[1] [4] [0] [1] [2] [5]後按 **OK** 鍵
- 輸入時間，如 5:20pm：

\* 24 小時制格式的輸入方式: [1] [7] [2] [0]

\* 12 小時制格式的輸入方式: [0] [5] [2] [0]，然後按 **▲** 或 **▼** 鍵選擇 AM (早上) 或 PM (下午)

- 按 **OK** 鍵確定

#### 鬧鐘

- 按 **MENU** 鍵
- 按 **▲** 或 **▼** 鍵選擇" CLOCK & ALARM "，按 **OK** 鍵
- 按 **▲** 或 **▼** 鍵選擇" ALARM "，按 **OK** 鍵
- 按 **▲** 或 **▼** 鍵選擇所需設定，按 **OK** 鍵

OFF 鬧鐘關閉

ON ONCE 鬧鐘只在設定時間響鬧一次

ON DAILY 鬧鐘在所設定的時間每天響鬧一次

- 輸入響鬧時間後按 **OK** 鍵確定

#### 鬧鐘提示音

有 3 鐘提示音可供選擇

- 按 **MENU** 鍵
- 按 **▲** 或 **▼** 鍵選擇" CLOCK & ALARM "，按 **OK** 鍵
- 按 **▲** 或 **▼** 鍵選擇" ALARM TONE"，按 **OK** 鍵
- 按 **▲** 或 **▼** 鍵選擇所需提示音，按 **OK** 鍵

#### 更改 PIN 碼

- 按 **MENU** 鍵
- 按 **▲** 或 **▼** 鍵選擇 "ADVANCED SET" · 按 **OK** 鍵
- 按 **▲** 或 **▼** 鍵選擇 "CHANGE PIN" · 按 **OK** 鍵
- 輸入舊 PIN 碼後 · 按 **OK** 鍵 （註：初始預設值 PIN 為 0000 · 如更改後忘記 PIN 碼 · 則請重新初始化設定電話）
- 輸入新 PIN 碼後 · 按 **OK** 鍵
- 如設定成功 · 會出現「嗶」一聲確認

#### 註冊手機

主手機最多可連接 4 部子手機 · 增設或預先註冊手機

#### 註冊手機程序

- 先於主手機底座 PAGING 鍵 按五秒
- 按子手機按 **MENU** 鍵
- 按 **▲** 或 **▼** 鍵選擇 "ADVANCED SET" · 按 **OK** 鍵
- 按 **▲** 或 **▼** 鍵選擇 "REGISTRATION" · 按 **OK** 鍵
- 輸入 PIN (預設值：0000)，按 **OK** 鍵

- 子機螢幕會顯示 "WAITING" 字樣
- 如註冊成功 · 子機會發出訊號聲確認

#### 註銷機登記程序

- 按 **MENU** 鍵
- 按 **▲** 或 **▼** 鍵選擇 "ADVANCED SET" · 按 **OK** 鍵
- 按 **▲** 或 **▼** 鍵選擇 "UNREGISTER" · 按 **OK** 鍵
- 輸入 PIN (預設值：0000) · 按 **OK** 鍵
- 按 **▲** 或 **▼** 鍵選擇有關手機 · 按 **OK** 鍵

#### 初次設定

#### 音頻 / 脈衝撥號

- 按 **MENU** 鍵
- 按 **▲** 或 **▼** 鍵選擇"ADVANCED SET"，按 **OK** 鍵
- 按 **▲** 或 **▼** 鍵選擇"DIAL MODE"，按 **OK** 鍵
- 按 **▲** 或 **▼** 鍵選擇所需撥號，按 **OK** 鍵

#### 閃斷時間

- 按 **MENU** 鍵
- 按 **▲** 或 **▼** 鍵選擇"ADVANCED SET"，按 **OK** 鍵
- 按 **▲** 或 **▼** 鍵選擇"RECALL TIME"，按 **OK** 鍵
- 按 **▲** 或 **▼** 鍵選擇設定閃斷時間，然後按 **OK** 鍵

SHORT= 100 ms ,MEDIUM = 300 ms ,LONG = 600 ms

閃斷功能是為在通話期間接聽第三者來電而設（香港為 600 ms）

#### 電話簿設定

#### 輸入新用戶

- 按 **MENU** 鍵
- 按 **▲** 或 **▼** 鍵選擇" PHONEBOOK"，按 **OK** 鍵
- 按 **▲** 或 **▼** 鍵選擇 "NEW ENTRY"，按 **OK** 鍵
- 用鍵盤輸入名字後，按 **OK** 鍵
- 輸入電話號碼後，按 **OK** 鍵

#### 設定直撥記憶

- 按 **MENU** 鍵
- 按 **▲** 或 **▼** 鍵選擇" PHONEBOOK"，按 **OK** 鍵
- 按 **▲** 或 **▼** 鍵選擇"DIRECT MEM"，按 **OK** 鍵
- 按 **▲** 或 **▼** 鍵選擇"KEY 1 "或 "KEY 2"，按 **OK** 鍵
- 按 **MENU** 鍵
- 按 **▲** 或 **▼** 鍵選擇" EDIT NUMBER"，按 **OK** 鍵
- 用鍵盤輸入名字後，按 **OK** 鍵

- 輸入電話號碼後，按 **OK** 鍵

#### 基本使用指引

#### 撥號

- 拿起電話機
- 按下撥出號碼

- 按 **☎** 鍵撥出

#### 免提模式

- 通話中的時候，按下 **☎** 鍵

#### 接聽第三者來電

- 當在通話中聽到來電提示聲的時候，按下 **R** 鍵

#第三者來電服務須要向電訊公司申請

#### 回撥功能

- 按 **▲** 鍵
- 按 **▲** 或 **▼** 鍵選擇
- 按 **☎** 鍵撥出

#### 聽筒靜音模式

- 在通話過程中，按 **⊗** 鍵可開/關 聽筒靜音模式 。
- 按 **⊗** 開啟靜音模式，顯示屏會出現“ MUTE ON” ，對方將聽不到你說話 。




#### 聽筒音量選擇

在通話過程中，按 **▲** 或 **▼** 鍵可選擇聽筒音量。

#### 鍵盤鎖

- 長按 **\*∞** 鍵，直到螢幕顯示"KEYS LOCKED "
- 長按 **\*∞** 鍵取消

#### 靜音模式

- 長按 **##**  鍵，直到螢幕顯示 
- 長按 **##**  鍵取消

#### 內線對講


- 按 **INT** 鍵
- 按 **▲** 或 **▼** 鍵選擇對話手機機號
- 按 **OK** 鍵，選擇的電話機會發出鈴聲

- 電話機按 **☎** 鍵接聽對話

#### 轉換顯示模式 (電話機名稱顯示模式 / 時間及日期顯示模式)

- 長按 **☞** 鍵可轉換顯示模式

#初始設定為電話機名稱顯示模式

<p>ustelecom    美国通讯有限公司</p>	<p>保養說明</p>
PRODUCTS - WARRANTY CARD	CUSTOMER'S COPY 用戶存根 / 不需寄回
<p><b>產品保養證</b></p>	<p><b>✦ 保養條款 ✦</b></p> <ol style="list-style-type: none"><li>此保養證有效期為購買當日起計12個月。</li> <li>此保養證只適用於原本購買產品之顧客及不可轉讓。</li> <li>保養服務只限於保養期內，請出示保養證，發票正本及全套產品一併交回。客戶須負責將產品送往本公司的費用。</li> <li>零件及配件(火牛、電源線及電芯)之保養期為購買後90天, 包括對電池的蓄電能量低於額定功率的80%以下及電池洩漏這兩種情況。</li> <li>保養證將不包括由下列情況所導致的損壞：(a) 產品曾經改變，修改及非由本公司修理過；(b) 正常磨損；(c) 不當裝配、使用、誤用、意外或疏忽；(d) 接觸水、雨、沙、塵埃、汗水、太過潮濕或接近熱源；(e) 使用其他品牌的配件。</li> <li>此保養證只在香港有效。</li> <li>由通知之日期起2個月內沒有領回已維修機件，公司有權自行處理有關機件，逾期失機，恕不負責。</li> <li>本公司有權隨時修訂保養條款，而無須先行通知客戶。</li></ol>
<p>姓名 Name: _____</p> <p>電話 T e l: _____</p> <p>型號 Model: _____</p> <p>零售商 Dealer: _____</p> <p>購買日期 Date of Purchase: _____</p> <p>機身編號 Serial No.: _____</p>	<p><b>✦ Warranty Conditions ✦</b></p> <ol style="list-style-type: none"><li>This warranty commences on the date of original purchase and expires 12 months from that date.</li> <li>This warranty extends only to the first consumer purchaser and is not transferable.</li> <li>Warranty service will only be provided within the warranty period. To obtain service, the complete set of product shall be brought to our service centre at the purchaser's own expense, together with this warranty card and the original purchase invoice.</li> <li>The warranty period for accessories (battery, adaptor, line cord) is 90 days commencing from the date of original purchase. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered.</li> <li>The warranty does not cover defects or damage result from (a) modification, alternation or repair by persons other than the authorized personnel of the company; (b) normal wear and tear; (c) improper installation and operation, misuse, accident, negligence; (d) contact with water, rain, sand, dirt; extreme humidity or heat, heavy perspiration; (e) the use of other brand accessories.</li> <li>The warranty is valid in Hong Kong only.</li> <li>Any repaired items not collected by customers within 2 months from the date of notice will be disposed of at the discretion of the company.</li> <li>The warranty conditions are subject to change by the company without giving prior notice to customer.</li></ol>
<p><b>辦公時間</b></p> <p>星期一至五（公眾假期休息） 上午十時至下午十二時；下午二時至五時</p> <p><b>Office Hours</b></p> <p>Mon - Fri (Except for Public Holidays) 10:00 am - 12:00 am<span> </span>; 2:00 pm - 5:00pm</p>	
<p>維修中心 SERVICE CENTRE 紅磡暢通道1號中旅貨運物流中心6樓 6/F., China Travel (Cargo) Logistics Centre, 1 Cheong Tung Road, Hung Hom, Kln. TEL: (852) 2185 6283</p>	

## 18.COM Electronics Pte Ltd.

# WARRANTY CARD

<p>Name: _____</p>
<p>Contact No. Tel: _____</p>
<p>Model: _____</p>
<p>Date Of Purchase: _____</p>
<p>Serial No.: _____</p>
<p>Dealer's Stamp: _____</p>

Service Centre:  
Monday- Friday Opening Hours  
9:30am - 12:30pm, 2:00pm - 5:00pm  
Tel: 6278 8274

<p>Remark</p> <p>1.Importer and Distributor<span> </span>: US Telecom Ltd Unit 308 Vanta Ind Ctr , Kwai Hing, HK. Info @ ustel.com.hk</p>
<p>2.Adaptor details: Brand mane: Ten Pao Factory address: ROOM 10-11,6/F, KWONG SANG HONG CENTRE, 151-153 HOI BUN ROAD, KWUN TONG,KOWLOON Hong Kong</p>

<p>此保養證只適用於香港 For Hong Kong Only</p>	
PRODUCTS - WARRANTY CARD	CUSTOMER'S COPY 用戶存根 / 不需寄回
<p><b>產品保養證</b></p>	<p><b>✦ 保養條款 ✦</b></p> <ol style="list-style-type: none"><li>此保養證有效期為購買當日起計12個月。</li> <li>此保養證只適用於原本購買產品之顧客及不可轉讓。</li> <li>保養服務只限於保養期內，請出示保養證，發票正本及全套產品一併交回。客戶須負責將產品送往本公司的費用。</li> <li>零件及配件(火牛、電源線及電芯)之保養期為購買後90天, 包括對電池的蓄電能量低於額定功率的80%以下及電池洩漏這兩種情況。</li> <li>保養證將不包括由下列情況所導致的損壞：(a) 產品曾經改變，修改及非由本公司修理過；(b) 正常磨損；(c) 不當裝配、使用、誤用、意外或疏忽；(d) 接觸水、雨、沙、塵埃、汗水、太過潮濕或接近熱源；(e) 使用其他品牌的配件。</li> <li>此保養證只在香港有效。</li> <li>由通知之日期起2個月內沒有領回已維修機件，公司有權自行處理有關機件，逾期失機，恕不負責。</li> <li>本公司有權隨時修訂保養條款，而無須先行通知客戶。</li></ol>
<p>姓名 Name: _____</p> <p>電話 T e l: _____</p> <p>型號 Model: _____</p> <p>零售商 Dealer: _____</p> <p>購買日期 Date of Purchase: _____</p> <p>機身編號 Serial No.: _____</p>	<p><b>✦ Warranty Conditions ✦</b></p> <ol style="list-style-type: none"><li>This warranty commences on the date of original purchase and expires 12 months from that date.</li> <li>This warranty extends only to the first consumer purchaser and is not transferable.</li> <li>Warranty service will only be provided within the warranty period. To obtain service, the complete set of product shall be brought to our service centre at the purchaser's own expense, together with this warranty card and the original purchase invoice.</li> <li>The warranty period for accessories (battery, adaptor, line cord) is 90 days commencing from the date of original purchase. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered.</li> <li>The warranty does not cover defects or damage result from (a) modification, alternation or repair by persons other than the authorized personnel of the company; (b) normal wear and tear; (c) improper installation and operation, misuse, accident, negligence; (d) contact with water, rain, sand, dirt; extreme humidity or heat, heavy perspiration; (e) the use of other brand accessories.</li> <li>The warranty is valid in Hong Kong only.</li> <li>Any repaired items not collected by customers within 2 months from the date of notice will be disposed of at the discretion of the company.</li> <li>The warranty conditions are subject to change by the company without giving prior notice to customer.</li></ol>
<p><b>辦公時間</b></p> <p>星期一至五（公眾假期休息） 上午十時至下午十二時；下午二時至五時</p> <p><b>Office Hours</b></p> <p>Mon - Fri (Except for Public Holidays) 10:00 am - 12:00 am<span> </span>; 2:00 pm - 5:00pm</p>	
<p>維修中心 SERVICE CENTRE 紅磡暢通道1號中旅貨運物流中心6樓 6/F., China Travel (Cargo) Logistics Centre, 1 Cheong Tung Road, Hung Hom, Kln. TEL: (852) 2185 6283</p>	

## CUSTOMER'S COPY : DO NOT MAIL THIS

- This warranty starts on the date of purchase and expires in 1 year. Customer must bring along this warranty card and original invoice or receipt together with the complete product for any repair services.
- Any warranty application with no invoice and/or warranty card are regarded as invalid warranty. Customer must pay for repair charges.
- This warranty is invalid if the product has been modified, altered and / or repaired by persons other than technician of our company or mishandled by customer.
- This warranty is applicable to Singapore only.
- This warranty does not cover damages caused by natural disasters such as flooding and lightning etc.
- Customers are requested to collect repaired unit within two months from date of submission. Units not collected after 6 months will be disposed off by the company.

.....  
18.COM Electronics Pte Ltd, 159 Sin Ming Road, Amtech Building, #04-01, Singapore 575625

<p>3.Battery details: Brand Name: GREPOW/SANIK; Battery model name: AAA300/SN-AAA30H</p>
<p>4.Maximum Output Power(NTP): 24dBm</p>
<p>5.Frequency Range: 1880-1900MHz</p>