



Press UP or DOWN key to review the incoming calls or enter a telephone number, Hold the M1-M3 button to save the number.

NOTE: If you find any of the parts missing, please contact your local shop where you buy this product at once.

On hook state : press VOL button to select volume levels.(4 levels)

Diagram of the Uniden DCS-4000 radio control panel. The panel features a speaker on the left, a display screen in the center, and a control area on the right. The control area includes buttons for M1, M2, M3, SET, DIAL, HOLD, VOL, FLASH, RESLIP, and MONITOR. A Ringer/Message LED Lamp is located above the speaker. The Uniden logo is positioned above the display screen. Arrows point to various features: Up, Down, Out, Detect IN USE LED, Monitor, Dial, Set, Reslip, Volume, Hold, 3 Direct Memory, and Ringer/Message LED Lamp.



Phone number display

LOV key: Under the H/F state, Press this key to enter hands-free volume cycle menu, default third.

Please do not use telephone during thunderstorm.

1. Avoid putting the phone near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
2. Do not expose to direct sunlight or moisture.
3. Do not install the telephone during thunderstorm.
4. Clean the phone with a soft cloth.
5. Never use a strong cleaning agent or abrasive powder because this will damage this unit.

WARNING : To prevent fire or shock hazard, do not expose this product to rain or any type of moisture.

Contact : info@ustel.com.hk